


## Use of Biometric Device - STARTEK FM220

**Note:** All Browsers should be up to date.

### Install RD Services:

**Step 1:** Open the below link and click on Registered Device.

<http://acpl.in.net>

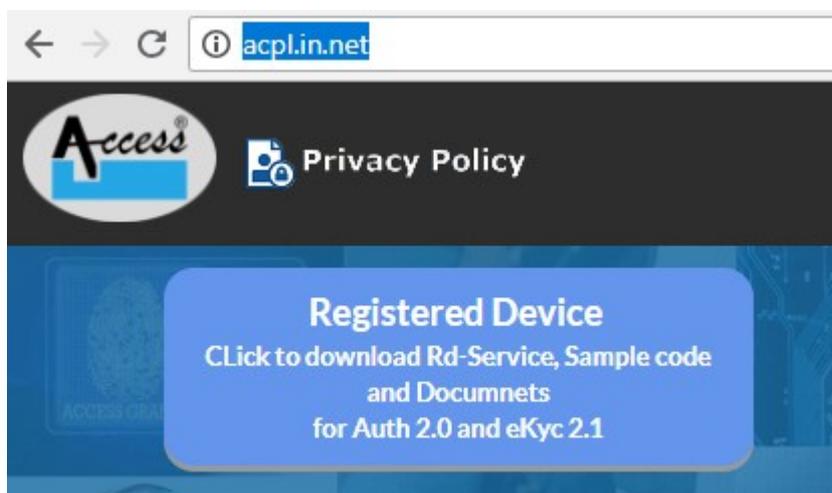


**Step 2:** Download


- a. Windows Certified RD Service
- b. Windows Support Tools

-  Windows Certified RD service
-  Windows support tools

**Step 3:** Install both the downloaded setup

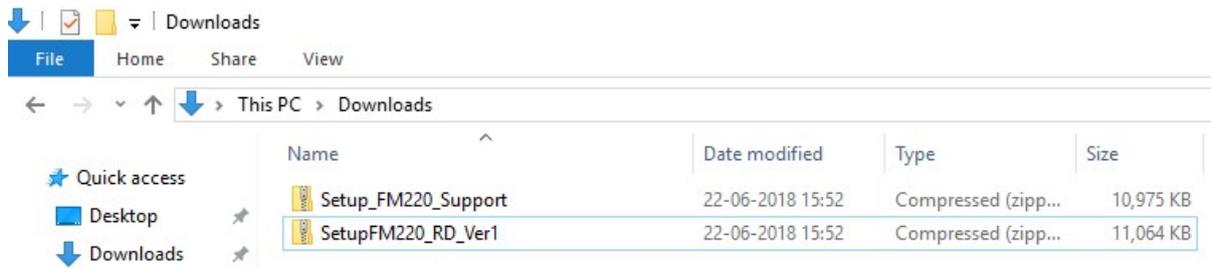

**Step 4: (Test)** after installation is done connect the device. Click on the APCL icon in the tool bar and select the option to test 'Test Capture'.

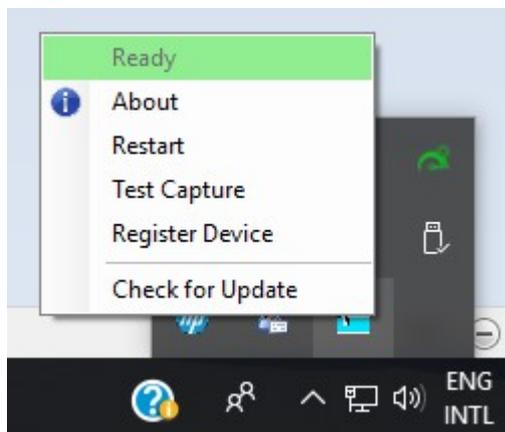

**Step 5:** Now you can use the device on the tribal website.

### Install Driver:

**Step 1:** Open the Link

<http://www.startek-eng.com/technology.aspx?keys=fm+220>

**Step 2:** Download the Driver for FM220U


## Download

Home > Support > Download

Keyword Search:  

Reader		
FM220U	Specification	<a href="#">PDF</a> 
FM220U	Driver	<a href="#">ZIP</a> 
FM220U	Scanner Specification	<a href="#">PDF</a> 
FM220U	Fingerprint Reader User Guide	<a href="#">PDF</a> 


**Step 3:** Go to Device Manager in your Computer. Right click on the FM 220 and select Update Driver.

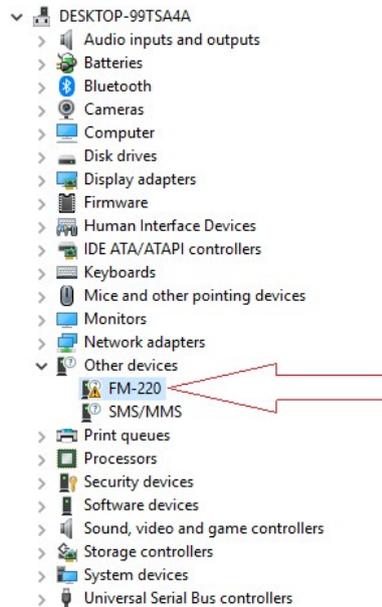


**Step 4:** Select browse my computer for driver software



**Copy the Path of the driver location**

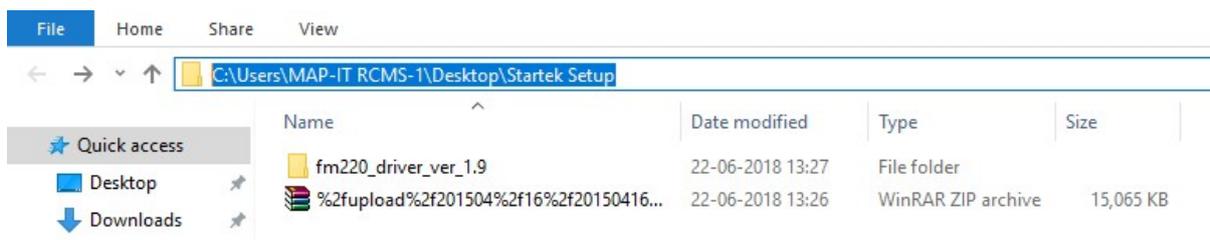

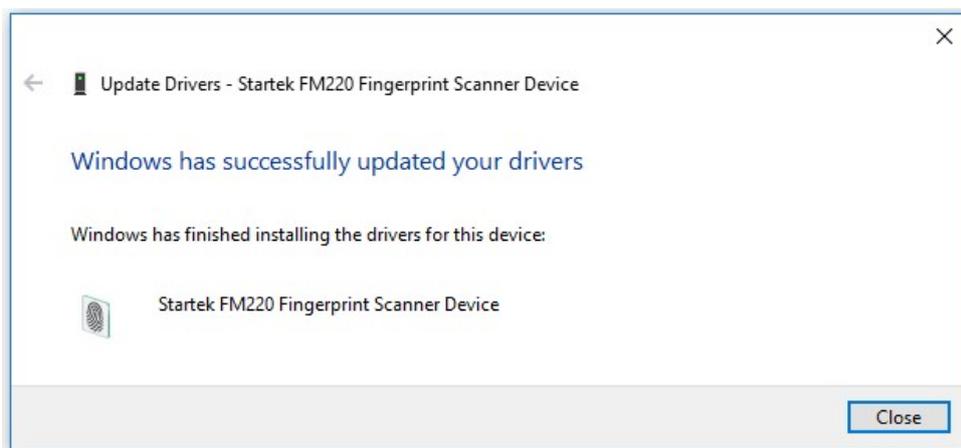


**Step 5:** Connect the device for use.

## Browser Configuration

## 1) Chrome

Open chrome browser and write below in url and click on Enable “Allow invalie certificates for resources loaded from localhost” and then click “RELAUNCH NOW”

**chrome://flags/#allow-insecure-localhost**

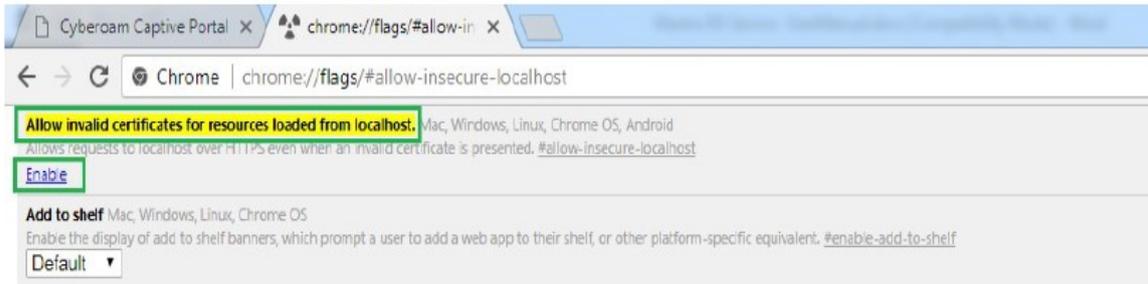


Your changes will take effect the next time you relaunch Google Chrome.




## 2. Mozilla Firefox Settings


### 1. Go to the options

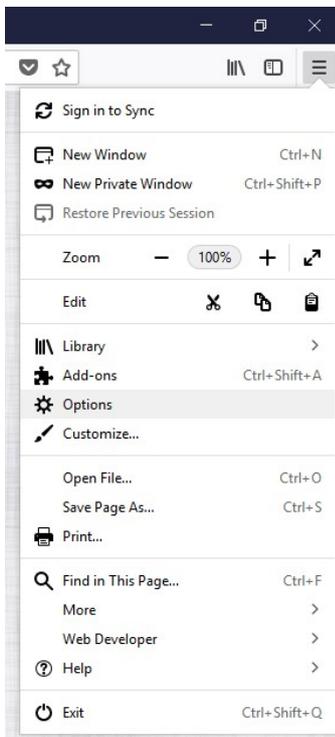

## 2. Search Certificates

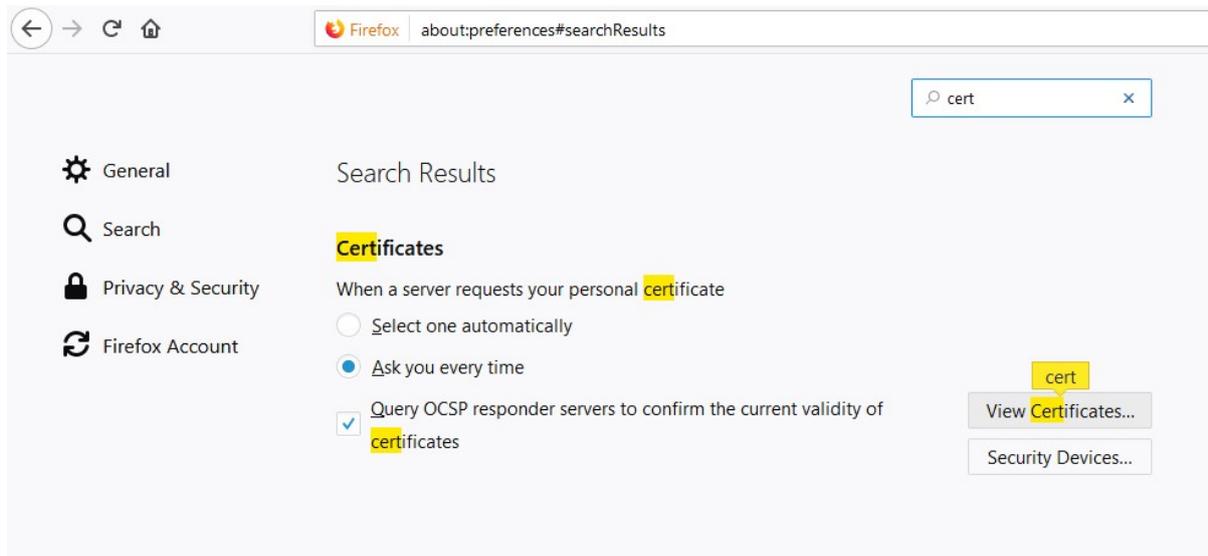

3. Select 'View Certificates.'
4. Select the 'Servers'.
5. Click on 'Add exception'

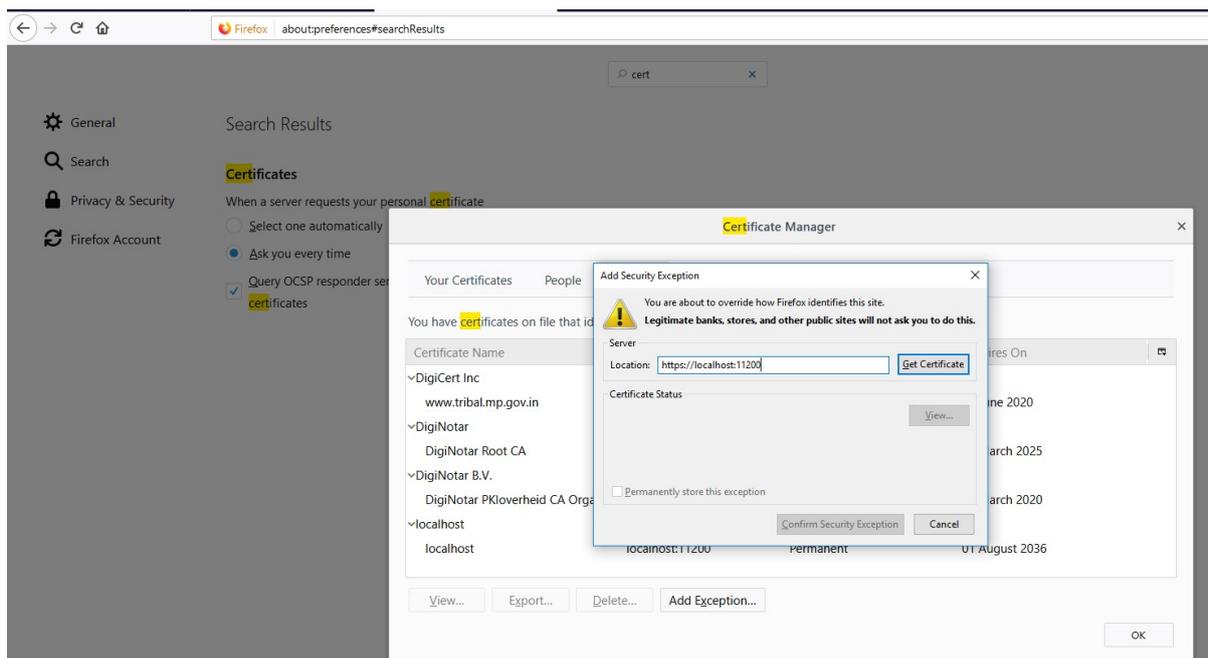

6. Enter the Location as <https://localhost:11200>
7. Click on Get certificate